

V5 kingguard User Manual



Shenyang VS DIGITAL Technology Development

# <u>CO.,LTD</u>

Website: www.vsdigital.com

1



# Contents

# System composition

Part one Hardware	3
1.1 One Set includes	3
1.2 V5 Setting in Software	3
1.3 Read Tags and checkpoint tag installation	5
1.4 Download Patrol Data	7
1.5 Entry Checkpoint Tag in Software	10
1.6 How to Charge	13
Part Two FAQ	14
2.1 Can not read tag	14
2.2 Can not connect with the computer	14
2.3 Incorrect clock	14
2.4 Can not read after changing battery	14



# Part one Hardware

# 1.1 The whole set



1.2 V5 Setting in Software

Run your management software and move your cursor to "Reader", you will see the picture below.

Home	Site	Tag	Schedule	Download	Reader	Report	User	Email	Setting	Logout (admin)
Home » Rea	der									
										D
	Reader I	Ď	Name		Description		Dead	lline		Last Downloadir
1308-228	327					n	one		2014-08-07	11:41:22
_			_						L	
	£°⊀	<b>2</b> —	→ Cli	ck here, cl	noose the	reader y	you are	using		
Choose the re	ader you	are using	].							
	61		6				<b></b>			1
		12				155	P (	1	10	•••
							1	p		
-		.0								
0										
•										

Clicking V5, you will see the picture below



Guard tour system manufacture

GetParam Clicking here,	it will genera	te the parameter	s of the read	er.	
Clock: 2014-08-08 10:06:34	Production date:	2013-08	Machine ID:	1308-22827	
Deadline: 20FF-FF-FF	Firmware:	19	Hardware:	11	
Order: Buy	GetRecCount:	4			
Set Clock Delet	e Record	Upload Mode Manual	*	Date Format MM/DD	
Company Name				Device initialize	
					$\Lambda$
[ <u>浏览</u> ] Up	date firmwai			L	
IP Data Receiver's IP:	APN(Acces	ss Point Name):			
Port	User Name	4			
null	null Password:				
Set IP and Port	null				
	Set GPF				

The setting order of 1

1.you need to click the "device initialize" first

2.click the "set clock" .to set the clock as you need

3.Click the "Delete Record" to clear the data in reader

4. Choose the upload mode- "automatic" or "manual"

5." company name"-write your own company name correctly.

6."set timezone"-choose your local timezone.

7. support update firmware .



Tel:+86-24-24500650





## **Attention:**

All above operation is based on **OGP standalone version**, if you are using the other software version. Please refer to other software user manual.

# 1.3 Read Tags and checkpoint tag installation



The operation of V5 is very simple that you just need to put its stainless head on the stainless checkpoint and if you feel the vibration once and the LED flash with blue color, that means your operation is right.The patrol data has not been saved if read the same tag without

### V5 Kingguard Indication information

NO.	prompt	meaning	remark
1	LED light flash twice	store record	normal
	+ shake		
2	LED flash +shake	records will be full	store record ASAP
	twice		
3	LED flash three	records are full	store record immediately
	times		

Tel:+86-24-24500650



4	LED	continuously	clock is wrong	correct time with computer
	twinkle	e 10 times		

#### ▲ checkpoint tag installation

ABS cover Stainless cover The installation of Dallas point is very simple. You just need to fix the point with a ABS or Stainless cover by two screws.

▲ Patrolman Tag





## 1.4 Download Patrol Data





V5 can transmit data with downloader and a computer, they can not be separated or it will not work.

Please pay attention to the interface:

It's the USB-B interface, so you need to choose the correct cable when you transmit the patrol data.

**2.**Transmit data with IP downloader-transmitting the data from remote place. IP-downloader-GPRS



Guard tour system manufacture



IP-downloader-Ethernet



▲With a 2G SIM card and an antenna in the IP-downloader, you can transmit the patrol data from a remote distance place

▲When your SIM card is out of fee, you can also transmit data with a





This kind of combination is appropriate for there being cable network in the security guard room, thus you can connect the IP-downloader with the RJ45 port and transmit data from a remote place.

Run your management software and move your cursor to "Reader", you will see the picture below.



Setting Tag Schedule Download Reader Report Logout (admin) Home » Reader Last Downloading Time Reader ID Name Description Deadline No results found. m **\_ O** Choose the reader you are using. 1 GetParam Set System Clock Set Language English 💌 Set Reader Type None 💌 Device initialize Delete Record Company Name Set TimezoneInfo None ▼ □DST [浏览...] Update firmware - Parameter Clock: Language: Reader Type: 2014-08-18 14:04:51 English V5 Timezone: null

Serial ID:	
1405-41020	
Production date:	

1.Click the IP-downloader icon first.

2. Then click the "GetParam" button.

3.lt will generate the specific parameter and all of them can not be changed.(eg.picture 3)



4. The port number will generate automatically, you need to fill the "IP Data Receiver's IP" according to your computer IP.

5. Click the "Set IP and Port" button to save the information.

# **1.5 Entry Checkpoint Tag in Software**

1.login your own account. www.onlinguardpatrol.com

Before you entry tag information, you need to set sites according to your needs.

**2.Set site**-move your cursor to "Site". You will see the picture below.

Hom	Home I <u>e » Patr</u>	Data Entry Site Tag	Reader	Report Us	er Subscription	Setting	Logout	Help	•
				Name * Start tim 00:00 Descriptic Contacts Tel Mobile Address	e of daily (HH:MM)		ne pa	trolling	3 beginning tim
		2		Create S	rink				

information.

<u>2.</u>Click the "create", the information above will generate records automatically as the arrow "3" shows.

3.Give number to each checkpoint such as 1, 2, 3, 4... and scan them according to the order then download the data to software(refer to 1.4). The record in the reader will keep this order when you upload it in the software. It is to make sure the tags' order correspond to the checkpoint place's order.

4.choose the site you want to entry the tags.

Tel:+86-24-24500650



ome » Tag Ch	eckpoint	Ţ						
te name.	enam						Displaying 1-1	1 of 1 r
	heckpoint ID			Name		Description	No.	
000E00708E	91	Sena	m Checkpoint		Resident - East	Legon	1	1
Ì II	∎t							
						Do	wnload 1 tag.Downlo	ad 1 t
D 🖬	ату —	Tagil	D	Name	Descrip	Da	wnload 1 tag.jDownlo Scantime	oad 1

1.<u>1.</u>Choose the site that you want to input the data.

2.Click , add checkpoint tag from unregistered points .

Choose the tag you want to input in this site, Then you will see the picture below.

	Site Tag	Schedule	Reader Report	User En	nail Setting	Logout (paul_admin)	Online Help	
Home > Tao Ch	ieckpoint	-						
one name: [a	penam	-					Displaying 1-1 o	of 1 res
0	Eheckpoint (D		Name			Description	No.	
000E00708E	391	Senam	n Checkpoint		Resident - East I	egon	1 ,	1 1
						Do		
							whiteau i tag. wowniea	d 1 ta
Categ	ony	Tag ID		Name	Descrip	lion	Scan time	id 1 ta

<u>3.</u> choo	se the data with " $\checkmark$ "	
<u>4.</u> click	to add them	

Then you will see the picture below.



ome » Tag	Checkpoin	d									
ite Name	: Senam		·						Displaying	1-2 of 2	l res
	Checkp	di trie	The second s		Hame			Description	R:	6	
000E007	08891		Se	nam Checkp	oint	R	tesident - Eas	st Legon	1	1	
*******											

**Modify checkpoint message**: click the pencil and choose you want to modify with a  $\sqrt{}$ ,

te Name: Patrol Site 🔹			Displaying 1	-3 of 3	rest
Checkpoint ID	Name	Description	No.		
00100002AD5E	1-1-1		1	P	*
001000021DCB	2-2-2		2	£	*
00100002AD5D	3-3-3		3	1	*
	Checkpoint ID 00100002AD5D Name * 3-3-3		6	9	

Attention: the way to entry the patrolman tag(blue one) is similar to the checkpoint, you can refer to it. All above is based on OGP (Online Guard Patrol) web-based version software.if you are using standalone version, please refer to software CD software user manual.



# 1.6 How to replace the battery by yourself

#### Battery

3 AAA size alkaline batteries, easily purchase and replace. It supports about one year work, Or use more durable battery ER18505,open the V51 back-cover,find the battery clamp and replace the battery in right position. Close the back-cover again.



#### The way of changing batteries:

1, screw out the end cap anticlockwise. Get the battery by screwing out anticlockwise waterproof blade with straight screwdriver.

2, Before putting the battery back, connect anode of battery compartment and mental side wall for 2 seconds with screwdriver.

- 3, put the battery and spring back, please notice the anode and cathode.
- 4, screw up the end cap, don't break the waterproof rubber ring.
- 5 correct the time for guard reader.

#### Battery reminder

-There are two reminders after reading the tag.

-Blue LED flash: battery power is normal.

-Red LED flash: battery power is low.



# Part two FAQ:

#### 2.1 Can not read tag

please sure that the battery is low power or not if LED light doesn't work when you read.
 please connect with the computer ASAP to read the data if LED light intermittence twinkle three times, it shows the storage is full, and the device fails to store.

3, the same checkpoint only can read once in the same minute. It only shows blue light without vibration if you read it again.

#### 2.2 Can not connect with the computer

1, check if V5downloader and computer connect well or not

- 2, check if VT5 driver install correctly or not
- 3, check if software choose correct type or not

4, check if read head has adhesive tap, label or others on it or not, you could use it after cleaning.

#### 2.3 Incorrect clock

LED light twinkle continuously for 10 times, it shows the clock is wrong when you read. It can use after correcting by connecting with computer.

#### 2.4 Can not read after changing battery

Please put the battery back based on right way